

1-Piece Tub Shower

with solid core, reinforced bottom



1060

- 1 Check shower pocket area for level and for correct dimensions. Make sure drain hole is in the correct position.
- 2 Dry-Fit the tub-shower: Set the tub-shower unit in the pocket. You **MUST** use a level to ensure the unit is level. Shim if necessary.

1-PIECE TUB/SHOWER UNIT

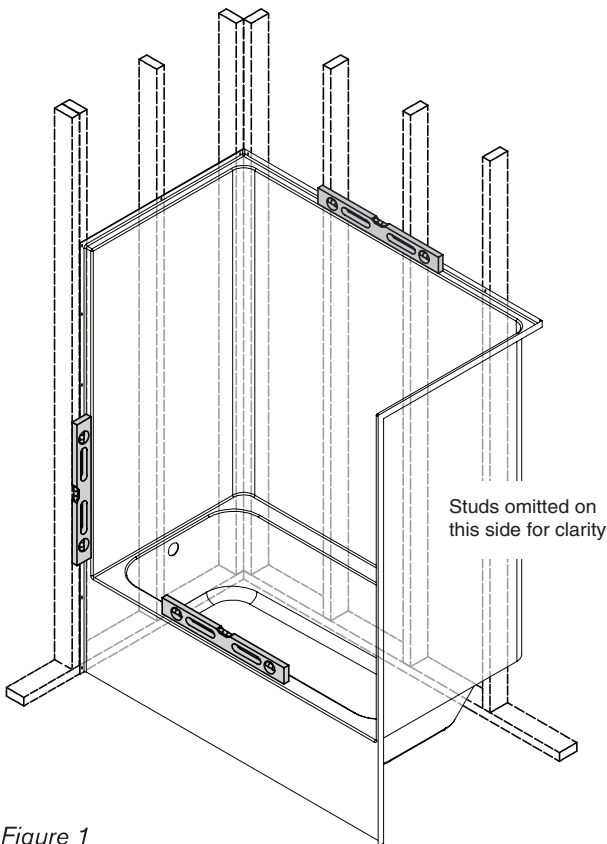


Figure 1

- 3 Once the unit has been leveled, have a plumber rough in the valve as well as the plumbing to the drain and overflow.
- 4 Make sure the tub-shower drains properly by pouring water in it. If in doubt, remove the tub from the pocket and review the previous steps.

- 5 Once drainage has been tested, screw the tub-shower's flanges to framing at 12" on-center vertically and horizontally at each stud. Pre-drill the nailing flanges to avoid cracking the gel coat.

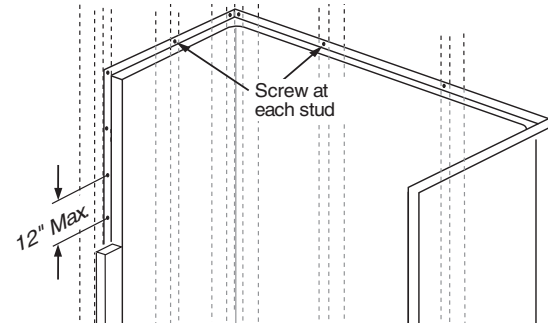


Figure 2